

# GÅTEBO

en  
zh



Design and Quality  
IKEA of Sweden



## ENGLISH

Please refer to the last page of this manual for the full list of IKEA appointed After Sales Service Provider and relative national phone numbers.  
The electronic user manual is available at [www.ikea.com](http://www.ikea.com).



## 中文

请参阅本手册最后一页，以获取宜家指定售后服务提供商的完整列表以及相关国家的电话号码。  
电子版用户手册可从宜家官网 [www.ikea.com](http://www.ikea.com) 下载。

ENGLISH

5

中文

22

## Contents

Safety information .....	5	Specifications.....	18
Product description .....	9	Installation and connection .....	19
Operation.....	11	Environmental concerns .....	19
Trouble shooting.....	17	IKEA guarantee.....	20

Subject to change without notice.

## Safety information

### **⚠ WARNING! PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

#### For your safety

- Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

**⚠ WARNING!** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a qualified technician.

## IMPORTANT SAFETY INSTRUCTIONS

### **WARNING**

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- Read and follow the specific:  
**“PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY”**

- This device can be used by children aged 8 and older, and by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience or knowledge, provided they are given proper instructions on the safe use of the device and understand the associated risks.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**⚠ WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Only use utensils that are suitable for use in microwave ovens.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The appliance must not be installed behind a decorative door in order to avoid overheating.
- Only use the temperature probe recommended for this oven.  
(For ovens provided with a facility to use a temperature-sensing probe.)
- The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
- The microwave oven must be operated with the decorative door open. (For ovens with a decorative door.)
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - by clients in hotels, motels and other residential type environments;
  - farm houses;
  - bed and breakfast type environments.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire. Metallic containers for food and beverages must not be used as they may ignite. The appliance is intended to be used freestanding. To avoid overheating do not install in a cabinet or behind a decorative door.

- The appliance shall not be cleaned with a steam cleaner.
- The appliance is intended to be used freestanding.
- The rear surface of appliances shall be placed against a wall.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- The temperature of accessible surfaces may be high when the appliance is operating.

**⚠ WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

**⚠ WARNING:** To prevent burns, please do not touch the microwave while it is running.

#### SAVE THESE INSTRUCTIONS

## TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

### ⚠ DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

### ⚠ WARNING!

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- If a long cord set or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - The extension cord must be a grounding-type 3-wire cord.
  - The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

### CLEANING

Be sure to unplug the appliance from the power supply.

- Clean the cavity of the oven after using with a slightly damp cloth.
- Clean the accessories in the usual way in soapy water.
- The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Cleaning Tip ★ For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

### ⚠ CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on **“MATERIALS YOU CAN USE IN MICROWAVE OVEN OR TO BE AVOIDED IN MICROWAVE OVEN.”**

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

- Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- Cook on maximum power for 1 minute.
- Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- Do not exceed 1 minute cooking time.

## Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 5 mm (3/16 inch), above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

## Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

## Product description

### SETTING UP YOUR OVEN


#### Name of oven parts and accessories

Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:

Glass tray 1x

Turntable ring assembly 1x

Instruction manual 1x

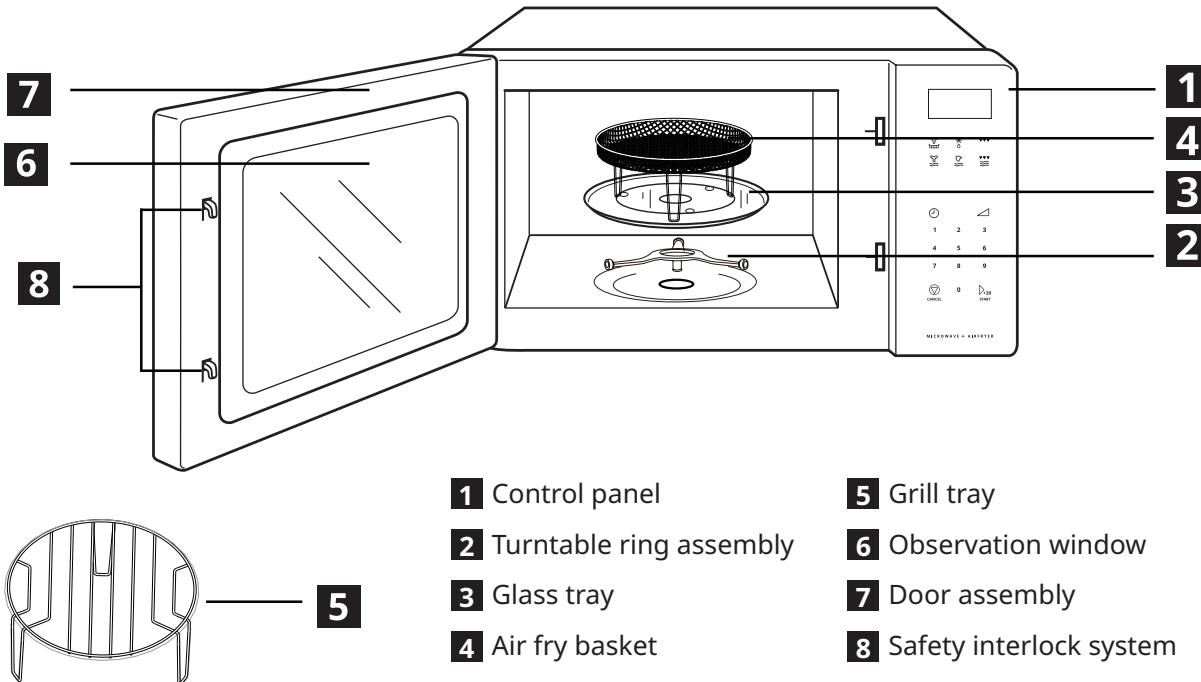


	Grill Tray	Air Fry Basket
Mode		
Microwave	NO	NO
Grill	YES	YES
Air fry	YES	YES
Convection	YES	YES
Combi.	C-1 (Microwave+convection)	YES
	C-2 (Microwave+grill)	YES

#### Note:

- Air Fry Basket: Do not use this in the solo microwave function. It should be placed on the glass tray when used in a suitable function according to above table.
- Grill Tray: Do not use this in the solo microwave function. It should be placed on the glass tray when used in a suitable function according to above table.


## Turntable installation

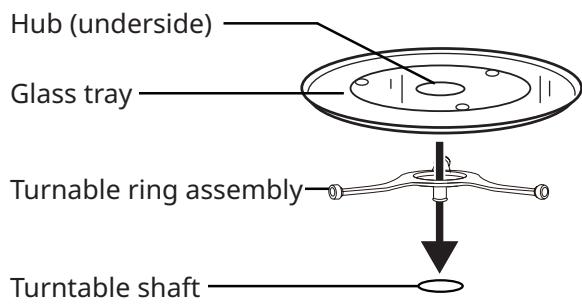

- a) Never place the glass tray upside down. The glass tray should never be restricted.
- b) Both glass tray and turntable ring assembly must always be used during cooking.
- c) All food and containers of food are always placed on the glass tray for cooking.
- d) If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

## Operation

Control panel and features operation instructions

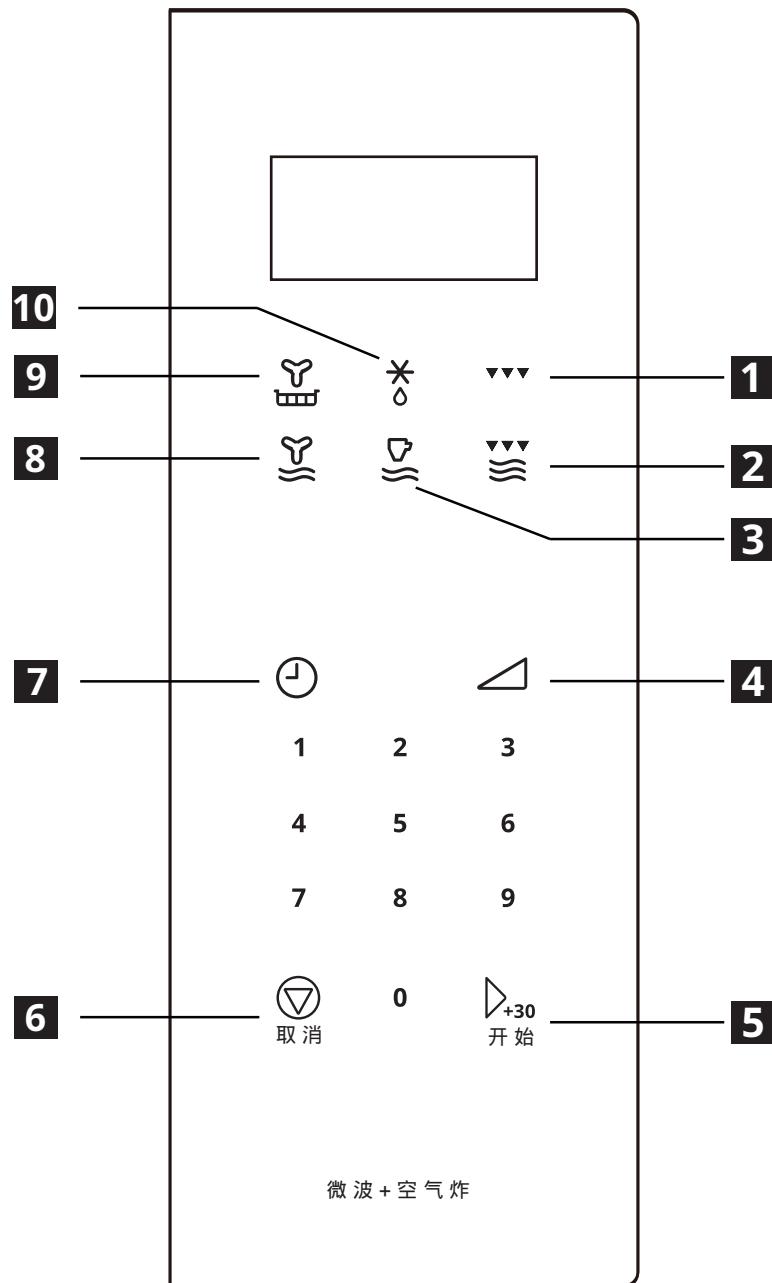

- 1** Grill
- 2** Microwave + grill
- 3** Warm up tea, coffee
- 4** Microwave power
- 5** Start/+30sec.

- 6** Stop/Cancel
- 7** Clock/Kitchen timer
- 8** Microwave + convection
- 9** Air fry
- 10** Defrost

## Setting the clock

- (1) Press “

Notes:

- (1) To reset the clock, please repeat step 1 to step 3.
- (2) The clock is a 24-hour display. If the clock is not set, it will not work when powered.

## Setting the kitchen timer

- (1) Press “

## Microwave cooking

10 power levels are available.

<b>Power</b>	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
<b>Display</b>	P100	P90	P80	P70	P60	P50	P40	P30	P20	P10
<b>WATT</b>	900W	810W	720W	630W	540W	450W	360W	270W	180W	90W

- (1) Press “

## Defrost by weight

- (1) Press “

Note:

The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

## Defrost by time

- (1) Press “” twice and then the screen will display “dEF2”.
- (2) Press the number keys to set the desired defrosting time.  
The maximum time value is “99:99”.
- (3) Press “” to start defrosting.

Notes:

- (1) The buzzer will sound to remind you to turn the food over during defrosting.  
If no operation, the oven will continue working.
- (2) The default power level is P30 and it cannot be changed.

## Grill cooking

- (1) Press “” once and then “G” will display.
- (2) Press the number keys to set the cooking time. The maximum time value is “99:99”.
- (3) Press “” to start cooking.

Note:

The buzzer will sound to remind you to turn the food over during grilling. If no operation, the oven will continue working.

## Air fry cooking (with preheating & without preheating)

- (1) Press “” once, and then “150°C” will display.
- (2) Press “” repeatedly to set the temperature. The 10 options are available, including 150°C, 160°C, 170°C, 180°C, 190°C, 200°C, 210°C, 220°C, 230°C, 240°C.
- (3) Press “” to confirm the temperature.
- (4) Press “” again to start preheating. When preheating is completed, the oven will beep twice. Open the door and place the food in the oven. Then close the door. (If preheating is not needed, please skip this step.)
- (5) Press the number keys to set the cooking time. The maximum time value is “99:99”.
- (6) Press “” to start cooking.

RECIPE NAME	WEIGHT	TIME (MIN.)	MODE	MENU TIPS
Frozen French Fries	300g	21:00	Air Fry 240°C	1. Shake or flip over after 2/3 cooking time to prevent the unevenness between top and bottom surface. 2. The results of different sizes of French fries are different, and 9mm*9mm size French fries are used in this experiment.
Frozen Potato Wedges	450g	15:00	Air Fry 240°C	Shake or flip over after 2/3 cooking time to prevent the unevenness between top and bottom surface.
Frozen Chicken nuggets	350g	24:00	Air Fry 240°C	Shake or flip over after 2/3 cooking time to prevent the unevenness between top and bottom surface.
Frozen Fried Squid	250g	24:00	Air Fry 240°C	Shake or flip over after 2/3 cooking time to prevent the unevenness between top and bottom surface.
Frozen Onion Ring	250g	15:00	Air Fry 240°C	Shake or flip over after 2/3 cooking time to prevent the unevenness between top and bottom surface.
Frozen Breaded Prawns	250g	15:00	Air Fry 240°C	Shake or flip over after 1/2 cooking time to prevent the unevenness between top and bottom surface.
Frozen Fried Chicken Cutlet	400g	21:00	Air Fry 240°C	Shake or flip over after 1/2 cooking time to prevent the unevenness between top and bottom surface.
Grilled Fresh Fish Fillets	300g	14:00	Air Fry 240°C	/
Frozen Buffalo Chicken wings	420g	18:00	Air Fry 240°C	Shake or flip over after 1/2 cooking time to prevent the unevenness between top and bottom surface.
Frozen Fried Chicken Wings	500g	18:00	Air Fry 240°C	Shake or flip over after 1/2 cooking time to prevent the unevenness between top and bottom surface.

Notes: Above setting for Air fry function is just recommendation, please follow the instruction on your package of frozen foods.

### Microwave+convection (Combination cooking)

- (1) Press "邈" once and then "C-1" will display.
- (2) Press the number keys to set the cooking time. The maximum time value is "99:99".
- (3) Press "▷<sub>+30</sub>" to start cooking.

### Microwave+grill (Combination cooking)

- (1) Press "邈" once and then "C-2" will display.
- (2) Press the number keys to set the cooking time. The maximum time value is "99:99".
- (3) Press "▷<sub>+30</sub>" to start cooking.

### Multi-stage cooking

Notes:

- (1) Two cooking stages can be set in multi-stage cooking.
- (2) If you set the defrost function, it will work automatically in the first stage.
- (3) The kitchen timer, auto menu, preheating and speedy cooking cannot be set as one of the multi-stage.

Example: Defrost food for 5 minutes and then grill food for 7 minutes.

- (1) Press "邈" twice and then the screen will display "dEF2".
- (2) Press "5", "0", and "0" to set the desired defrosting time to 5 minutes.
- (3) Press "▼▼▼" once and then "G" will display.
- (4) Press "7", "0", and "0" to set the cooking time to 7 minutes.
- (5) Press "▷<sub>+30</sub>" to start cooking.

### Speedy cooking

- (1) In standby mode, pressing the number keys 1 to 6 lets you quickly select a cooking time from 1 to 6 minutes. Then you can press "▷<sub>+30</sub>" to increase the cooking time. The maximum time value is "99:99".
- (2) In standby mode, press "▷<sub>+30</sub>" to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:99".

Notes:

In the microwave, grill, air fry combination, and defrost by time state, each one more press on "▷<sub>+30</sub>" can increase the cooking time by 30 seconds. (Except for the defrost by weight.)

## Warm up tea, coffee

- (1) Press "" once and then "1" will display.
- (2) Press "" repeatedly and then "1", "2", or "3" will display in order.
- (3) Press "+30" to start cooking.  
开始

## Beverage Menu Chart

Menu	Weight	Display	Power
Warm up tea, coffee	1 cup	1	P100
	2 cups	2	
	3 cups	3	

## Lock function for children

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

To activate the lock:

In standby mode, press and hold " 取消" for three seconds. A beep sounds and the locked icon will display.

To deactivate the lock:

In the locked state, press and hold " 取消" for three seconds. A beep sounds.

## Mute mode

To activate the mute mode:

In standby mode, press and hold "8" for three seconds. "OFF" will display. When you press the key, it does not make a sound.

To deactivate the mute mode:

In mute mode, press and hold "8" for three seconds. The buzzer will sound and "On" will display.

## Eco function

To enter ECO mode:

In standby mode, press " 取消" once. The screen will turn off.

To cancel ECO mode:

In ECO mode, pressing any key, or opening and closing the door will cancel it.

## Inquiring function

- (1) If the clock has been set, the current time will display for three seconds by pressing " 1" in the cooking state.
- (2) In the microwave cooking state, press " 1" to inquire about the power level. The grill, convection, and combination cooking state, press the corresponding keys to inquire about the cooking temperature, or cooking mode.

## Trouble shooting

<b>Normal</b>	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents.	In cooking, steam may come out of food. Most will get out from vents, but some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

<b>Trouble</b>	<b>Possible cause</b>	<b>Remedy</b>
Oven can not be started.	(1) Power cord not plugged tightly.	Unplug. Then unplug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat	(4) Door not closed well.	Close door well.


## Specifications

Model:	<b>GÅTEBO 506.035.12</b>
Rated Voltage:	220V 50Hz
Rated Input Power(Microwave):	1450 W
Rated Output Power(Microwave):	900 W
Grill:	1000 W
Convection:	2000 W
Oven Capacity:	26.67 L
Turntable Diameter:	288 mm
External Dimensions:	495.0×436.0×292.0 mm
Net Weight:	15.51 kg
Noise level:	≤63dB (A)

Serial Number (start with SN, 22-digit code)

Serial number:xxxxxxxxxxxxxxxxxxxx

Article Number (8-digit code)

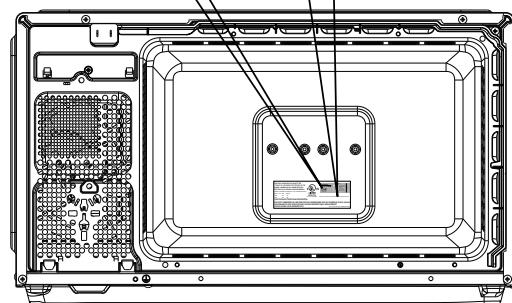

Picture for reference only

## Installation and connection


### Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

**Cabinet:** Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

### Installation

- Select a level surface that provide enough open space for the intake and/or outlet vents.

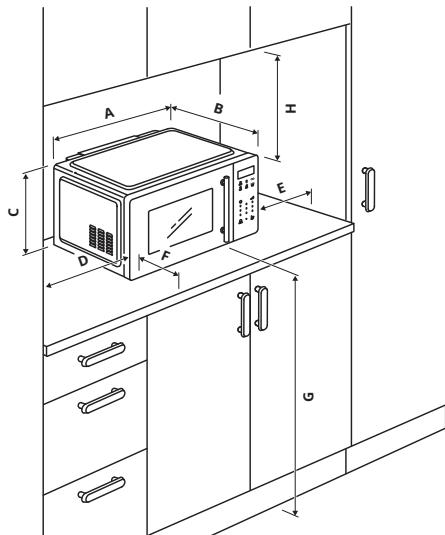

- The minimum installation height is 85 cm.
- The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30 cm above the oven, a minimum clearance of 20 cm is required between the oven and any adjacent walls.
- Do not remove the legs from the bottom of the oven.

- Blocking the intake and/or outlet openings can damage the oven.
- Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
- Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

### TEMPLATE

### Measurement Illustrations

Freestanding microwave on worktop

Item Name:

Item Number:

A	49.5	cm	19.5	"
B	43.6	cm	17.2	"
C	29.2	cm	11.5	"
D	20	cm	8	"
E	20	cm	8	"
F	min20	cm	8	"
G	min85	cm	33.5	"
H	30	cm	11.8	"

Other comments:

min 20 cm (8") distance from MW front to the edge of the countertop need to be added for safety.

**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.



**The accessible surface may be hot during operation.**

## Environmental concerns



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do not dispose of this product with household waste. Please send this product to WEEE collecting points where available.

## IKEA guarantee

### How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of your appliance at IKEA. The original sales receipt, is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance.

### Who will execute the service?

Contact nearest IKEA store.

### What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA.

### What will IKEA do to correct the problem?

IKEA will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

### What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings.

Unless such damages can be proved to have been

caused by production faults.

- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.

### How country law applies

The IKEA guarantee gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

### Area of validity

For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the guarantee conditions normal in the new country. An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information.

### AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA to:

- make a service request under this guarantee.
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

**How to reach us if you need our service**

The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request. Please see the IKEA catalogue or visit [www.ikea.com](http://www.ikea.com) to find your local store phone number and opening time.

**In order to provide you a quicker service, please also always refer to the IKEA article number (8 digit code) placed on the rating plate of your appliance.**

**SAVE THE SALES RECEIPT!**

It is your proof of purchase and required for the guarantee to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

**Do you need extra help?**

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

## 目录

安全信息.....	22	规格 .....	35
产品描述.....	26	安装和连接 .....	36
操作 .....	28	环保要求.....	36
问题排除.....	34	宜家质保.....	37

如有变更，恕不另行通知。

## 安全信息

**△ 警告！为避免潜在的微波能量过量接触而采取的预防措施**

**安全注意事项**

- 请勿在舱门打开时尝试操作此微波炉，否则可能会导致有害微波能量接触。切勿损坏或改动安全联锁装置。
- 请勿在微波炉前侧与舱门之间放置任何物体，或让污垢或清洁剂残留物在密封表面积聚。

**△ 警告！如果微波炉门或门封已损坏，则不得再使用,直到经有资格的维修人员修好为止。**

**重要的安全说明**

请仔细阅读并妥善保管以供将来参考

**警告**

为降低使用本电器时发生火灾、触电、人身伤害或微波炉能量过量接触的风险，请遵循以下基本预防措施：

- 阅读并遵循以下具体内容：“**为避免潜在的微波能量过量接触而采取的预防措施**”
- 如有安全使用方面的正确指导且知晓相关安全风险的情况下，本电器可由年满 8 岁的儿童，或者身体、感官或智力方面存在缺陷的人士，或者缺乏相关经验或知识的人士使用。
- 将本电器及其电源线放在 8 岁以下儿童无法接触的位置。
- 如果电源软线损坏,为了避免危险,必须由制造商、其维修部或类似部门的专业人员更换。

**△ 警告：**除有资格的维修人员外,其他人来执行检修操作都是危险的,包括拆下防止微波能量泄漏的防护盖等操作。

- 当加热用塑料或纸包装的食物时,应注意观察微波炉,因为有着火的可能。
- 仅允许使用适于在微波炉中使用的器具。
- 如发现有烟雾,应关掉器具开关或拔掉电源插头,并保持炉门关闭,以抑制火焰蔓延。
- 微波加热饮料会导致延迟喷溅沸腾,因此取出时必须小心谨慎。
- 奶瓶和婴儿食品罐应经过搅拌或摇动,喂食前应检查瓶内食物的温度,避免烫伤。
- 微波炉不能用来加热带壳的鲜蛋和已煮熟的蛋,因为在用微波加热时甚至在加热之后它们可能会发生爆炸。
- 应定期清洁微波炉并清除微波炉所有食物残渣。
- 不清洁微波炉会致使器具表面劣化,这会影响器具的寿命可能会导致危险的情况。
- 本电器不得安装在装饰门后,以免出现过热。
- 仅可使用推荐微波炉使用的温度探头。(针对配备了温度传感探头使用设施的微波炉。)
- 除非已在橱柜内对微波炉进行测试,否则不得将其置于橱柜中。
- 操作微波炉时须打开装饰门。(针对带装饰门的微波炉。)

**△ 警告：**禁止加热装在密封容器内的液体或其他食物,因为这样有可能发生爆炸。

**△ 警告：**只有在已经提供充分的指导以致于儿童能够采用安全的方法使用微波炉,并且明白不正确的使用会造成危险时,才能允许儿童在无人监控的情况下使用微波炉。

- 本电器适用于家庭及以下类似场景：
  - 商店、办公室和其他工作环境内的员工厨房区域；
  - 酒店、汽车旅馆、简易旅馆，以及其他居住环境；
  - 农舍；
  - B&B（住宿加早餐）类型的环境。
- 微波炉可用于加热食物和饮料。对食物或衣物进行烘干以及对加热垫、拖鞋、海绵、湿布等物体进行加热可能会引发受伤、着火或起火风险。禁止使用金属食品饮料容器，否则可能着火。此电器设计为独立使用。  
**微波炉不能放置于橱柜。**
- 不得用蒸汽清洁器清洁本电器。
- 此电器设计为独立使用。
- 电器后表面应靠墙放置。
- 器具不能在外接定时器或独立的遥控控制系统的方式下运行。
- 设备运行时可触及表面温度可能较高。

**△ 警告：**警告：当器具以组合模式工作，因温度升高，儿童必须在成人的监督下使用。

**△ 警告：**为避免烫伤，请勿接触正在运行的微波炉。

## 请妥善保管本手册

## 降低接地安装人员的受伤风险

### △ 危险

#### 电击危险

接触某些内部组件可能会导致严重人身伤害，甚至死亡。请勿拆卸本电器。

### △ 警告！

#### 电击危险

接地不当可能会导致触电。在正确安装本电器并对其进行接地之前，请勿插入插座。

本电器必须接地。在发生电气短路的情况下，接地能为电流提供引流线，从而降低电击风险。本电器配有带接地线和接地插头的电源线。必须将插头插入安装正确且已接地的插座。

如果未完全理解接地说明或怀疑电器是否已正确接地，请咨询合格的电工或维修人员。如需使用延长线，请仅用 3 芯延长线。

- 我们所提供的电源线较短，以便降低因被较长的电线缠绕或绊倒而引发的风险。
- 如果使用长电源线或延长线：
  - 电源线或延长线的电气额定值应至少达到本电器的电气额定值。
  - 延长线必须为接地型 3 芯电源线。
  - 对长电源线进行布线时，应确保其不覆盖柜台顶部或桌面，以免儿童对其进行拉扯或不慎被绊倒。

## 清洗

务必拔出本电器的电源插头。

- 微波炉使用之后，用略湿的清洁布擦拭微波炉的腔体。
- 用肥皂水以常规方式清洗配件。
- 当舱门框和密封件及相邻部件变脏时，必须用湿布小心清洗。
- 请勿用粗糙的研磨清洁器或锋利的金属刮刀来清洁微波炉舱门玻璃，以防划伤表面，导致玻璃破碎。
- 清洗提示 ★ 为方便清洗加热食物可能触及的微波炉内壁：将半个柠檬置于碗中，加入 300 毫升 (1/2 品脱) 的水，并用 100% 微波火力加热 10 分钟。用柔软的干布擦拭微波炉。

## △ 注意

### 人身伤害危险

顶盖可防止微波能量接触，因此必须由专业人员执行需要拆除顶盖的服务或维修操作，以防发生危险。

请参阅有关“**可在微波炉中使用或应避免在微波炉中使用的材料**”的说明。

某些非金属器具可能不适于微波加热。如有疑问，您可按以下步骤测试可疑器具。

器具测试：

- 在可安全进行微波加热的容器中倒入 1 杯冷水（250 毫升），并将可疑器具一并放入。
- 以最大火力加热 1 分钟。
- 小心感受器具的温度。如果空器具变温，则不得将其用于微波加热。
- 加热时间请勿超过 1 分钟。

## 可在微波炉中使用的材料

器具	备注
加热盘	请遵循制造商的说明。加热盘底部至少须高出转盘 5 毫米 (3/16 英寸)。使用不当可能会导致转盘损坏。
餐具	仅限可安全进行微波加热的餐具。请遵循制造商的说明。请勿使用开裂或有缺口的餐盘。
玻璃罐	务必移除顶盖。仅用于将食物加热至温热。多数玻璃罐不耐热，且可能会破裂。
玻璃器皿	仅限耐热烤箱玻璃器皿。确保无金属饰边。请勿使用开裂或有缺口的餐盘。
微波烹饪袋	请遵循制造商的说明。请勿用金属夹将其密封。留出缝隙以便蒸汽逸出。
纸盘和纸杯	仅用于短时间加热。请勿在加热时离开微波炉。
纸巾	用于覆盖食物以重新加热和吸收油脂。仅在有监督的情况下用于短时间加热。
羊皮纸	用作盖子以防止飞溅或用作蒸烘包裹物。
塑料容器	仅限可安全进行微波加热的餐具。请遵循制造商的说明。应标注“微波安全”字样。随着内部食物变热，某些塑料容器会变软。“蒸煮袋”和密闭的塑料袋应按包装指示撕开、戳破或排气。
塑料包裹膜	仅限可安全进行微波加热的餐具。用于在加热期间覆盖食物以保持水分。请勿让塑料包裹膜接触食物。
温度计	仅微波安全（肉类和糖果温度计）。
蜡纸	用作盖子以防止飞溅和保持水分。

## 避免在微波炉中使用的材料

器具	备注
铝制托盘	可能会导致电弧放电。将食物转移到可微波加热的盘中。
带金属柄的食物纸盒	可能会导致电弧放电。将食物转移到可微波加热的盘中。
金属或采用金属边饰的器具	金属可阻止食物进行微波受热。金属边饰可能会导致电弧放电。
金属捆扎带	可能会导致电弧放电，并有可能导致微波炉起火。
纸袋	可能会导致微波炉起火。
塑料泡沫	暴露于高温时，塑料泡沫可能会熔化或污染内部液体。
木材	在微波炉中使用时，木材会变干并有可能开裂或破裂。


## 产品描述

### 设置微波炉

#### 微波炉零件和配件的名称

从纸箱和微波炉腔体中取出微波炉及所有材料。此微波炉附带以下配件：

玻璃托盘	1 个
转盘环	1 个
使用说明书	1 个

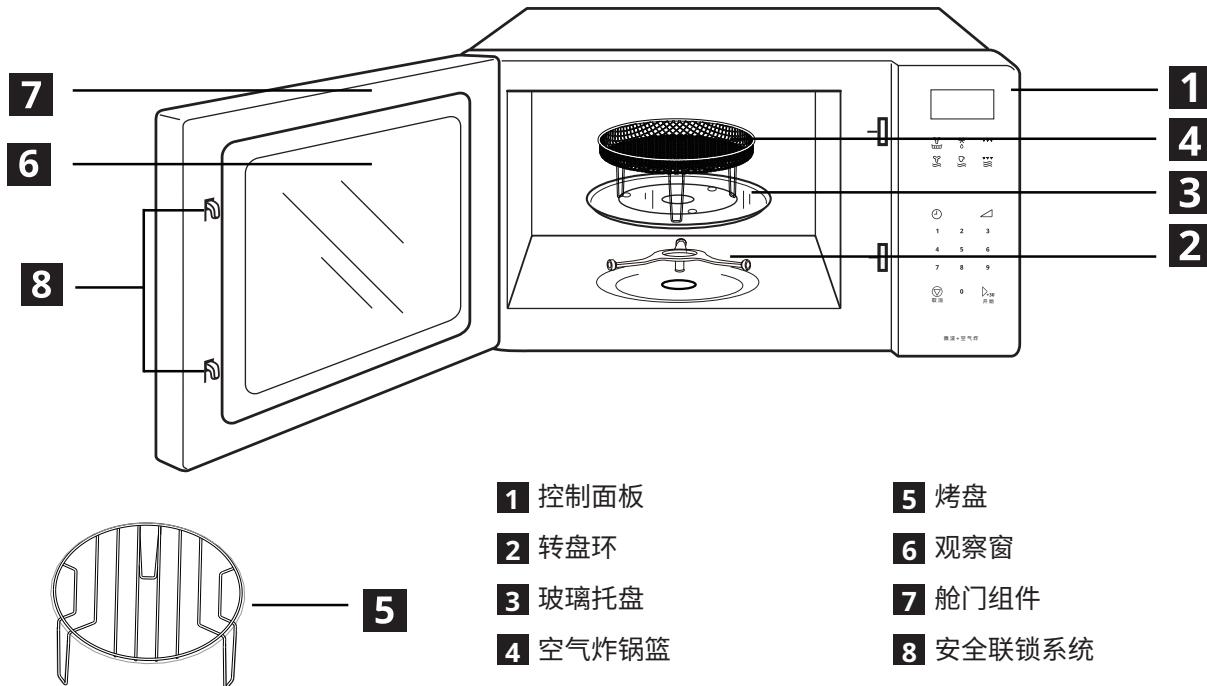


	烤盘	空气炸锅篮
模式		
微波	否	否
烧烤	是	是
空气炸锅	是	是
对流	是	是
组合加热	C-1 (微波 + 对流)	是
	C-2 (微波 + 烧烤)	是

#### 注意：

- 空气炸锅篮：请勿在单微波功能下使用。在上表适宜功能下使用时，请置于玻璃托盘中。
- 烤盘：请勿在单微波功能下使用。在上表适宜功能下使用时，请置于玻璃托盘中。


## 转盘安装

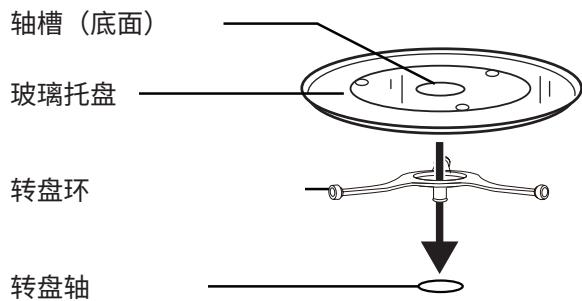

- a) 切勿将玻璃托盘倒置。切勿限制玻璃托盘转动。
- b) 加热期间始终须使用玻璃托盘和转盘环组件。
- c) 所有食物和食物容器均应始终放在玻璃托盘上进行加热。
- d) 如果玻璃托盘或转盘环组件出现破裂或断裂, 请与最近的授权服务中心联系。

## 操作

控制面板和功能操作说明

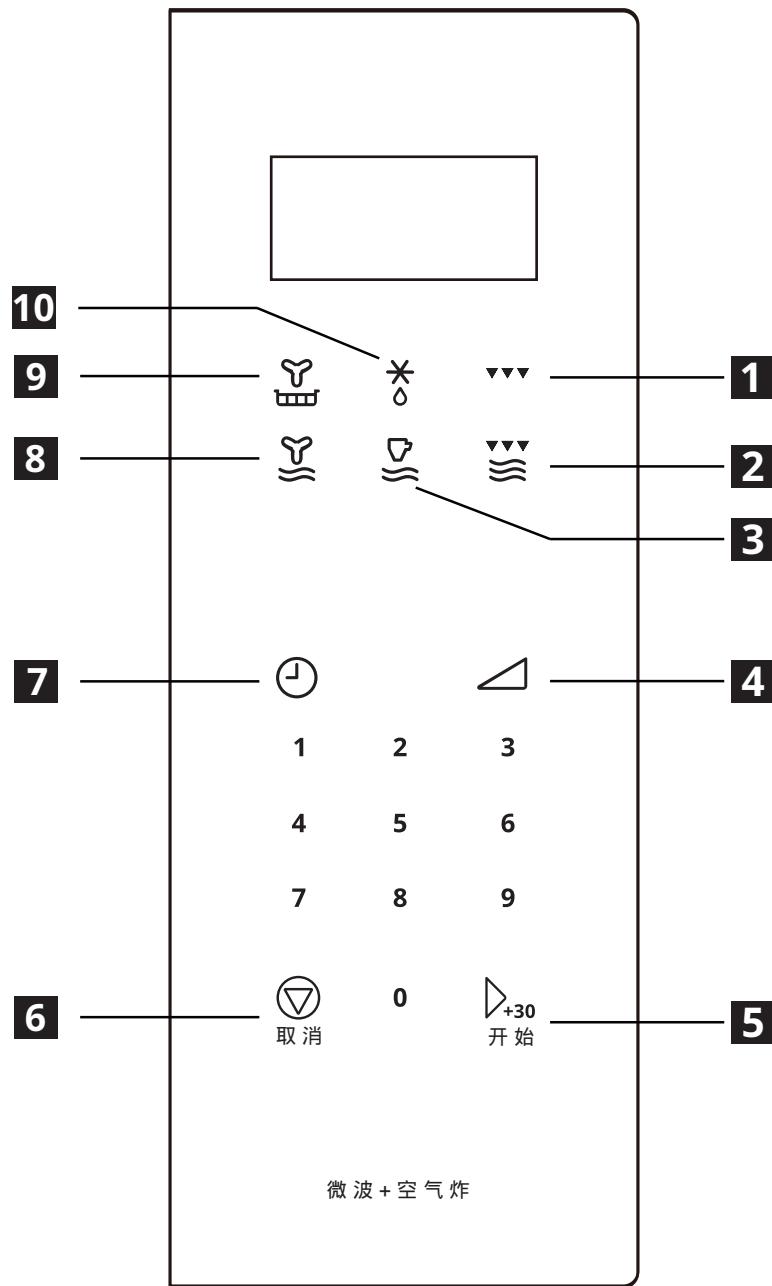

1 烧烤

2 微波 + 烧烤

3 加热茶、咖啡

4 微波火力

5 开始/+ 30 秒

6 停止/取消

7 时钟/厨房定时器

8 微波 + 对流

9 空气炸锅

10 解冻

## 设置时钟

- (1) 按一次“”，随即显示“00:00”。
- (2) 按数字键输入时间。  
例如：如果希望将时钟设为 12:10，请依次按“1、2、1、0”。
- (3) 按“

注意：

- (1) 如需重置时钟，请再次执行第 1-3 步。
- (2) 始终为 24 小时制显示。如果未设置时钟，开机后时钟不会工作。

## 设置厨房定时器

- (1) 按两次“

## 微波加热

共有 10 个火力选择。

火力	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
显示	P100	P90	P80	P70	P60	P50	P40	P30	P20	P10
功率	900W	810W	720W	630W	540W	450W	360W	270W	180W	90W

- (1) 按一次“

## 按重量解冻

- (1) 按一次“

注意：

解冻过程中会出现蜂鸣声，提示您对食材翻面。如未进行操作，微波炉将继续加热。

## 按时间解冻

- (1) 按两次“

注意：

- (1) 解冻过程中会出现蜂鸣声，提示您对食材翻面。  
如未进行操作，微波炉将继续加热。
- (2) 默认火力为 P30，且无法更改。

## 烧烤

- (1) 按一次“

注意：

烧烤过程中会出现蜂鸣声，提示您对食材翻面。如未进行操作，微波炉将继续加热。

## 空气炸锅（预热和不预热）

- (1) 按一次“<img alt="空气炸锅图标" data-bbox="145 465 175 490>”，随即显示“150°C”。
- (2) 反复按“<img alt="空气炸锅图标" data-bbox="145 495 175 520>”设置温度。共有 10 个选项，包括 150°C、160°C、170°C、180°C、190°C、200°C、210°C、220°C、230°C、240°C。
- (3) 按“<img alt="开始图标" data-bbox="115 525 145 550>”确认温度。
- (4) 再次按“<img alt="开始图标" data-bbox="145 555 175 580>”开始预热。预热完成后，微波炉会发出两声嘟嘟声。打开舱门，将食材放入微波炉。然后合上舱门。  
(如果无需预热，请跳过此步骤。)
- (5) 按数字键设置加热时间。最大时间数值为“99:99”。
- (6) 按“<img alt="开始图标" data-bbox="115 615 145 640>”开始加热。

程序名称	重量	时间 (分钟)	模式	菜单提示
冷冻法式炸薯条	300g	21:00	空气炸锅 240°C	1. 加热时间满 2/3 后，摇晃或翻面，以免顶面和底面受热不均匀。 2. 不同大小的法式炸薯条的烹饪效果不同，本实验采用 9 毫米*9 毫米 大小的法式炸薯条。
冷冻薯角	450g	15:00	空气炸锅 240°C	加热时间满 2/3 后，摇晃或翻面，以免顶面和底面受热不均匀。
冷冻鸡块	350g	24:00	空气炸锅 240°C	加热时间满 2/3 后，摇晃或翻面，以免顶面和底面受热不均匀。
冷冻炸鱿鱼	250g	24:00	空气炸锅 240°C	加热时间满 2/3 后，摇晃或翻面，以免顶面和底面受热不均匀。
冷冻洋葱圈	250g	15:00	空气炸锅 240°C	加热时间满 2/3 后，摇晃或翻面，以免顶面和底面受热不均匀。
冷冻面包虾	250g	15:00	空气炸锅 240°C	加热时间满 1/2 后，摇晃或翻面，以免顶面和底面受热不均匀。
冷冻炸鸡排	400g	21:00	空气炸锅 240°C	加热时间满 1/2 后，摇晃或翻面，以免顶面和底面受热不均匀。
烤鲜鱼片	300g	14:00	空气炸锅 240°C	/
冷冻布法罗辣鸡翅	420g	18:00	空气炸锅 240°C	加热时间满 1/2 后，摇晃或翻面，以免顶面和底面受热不均匀。
冷冻炸鸡翅	500g	18:00	空气炸锅 240°C	加热时间满 1/2 后，摇晃或翻面，以免顶面和底面受热不均匀。

注意：上述空气炸锅功能设置仅作建议，请遵守冷冻食材外包装上的说明。

## 微波 + 对流（混合加热）

- (1) 按一次“”，随即显示“C-1”。
- (2) 按数字键设置加热时间。最大时间数值为“99:99”。
- (3) 按“+30”开始加热。

## 微波 + 烧烤（混合加热）

- (1) 按一次“”，随即显示“C-2”。
- (2) 按数字键设置加热时间。最大时间数值为“99:99”。
- (3) 按“+30”开始加热。

## 多阶段加热

注意：

- (1) 多阶段加热可设置两个加热阶段。
- (2) 如果设置了解冻功能，此功能会在第一阶段自动运行。
- (3) 厨房定时器、自动菜单、预热和快速加热不可设为其中的一个阶段。

例如：解冻食材 5 分钟，然后烧烤 7 分钟。

- (1) 按两次“”，随即显示“dEF2”。
- (2) 依次按“5”、“0”和“0”，将所需的解冻时间设为 5 分钟。
- (3) 按一次“▼▼▼”，随即显示“G”。
- (4) 依次按“7”、“0”和“0”，将加热时间设为 7 分钟。
- (5) 按“+30”开始加热。

## 快速加热

- (1) 在待机模式下按数字键 1-6，可快速选择 1-6 分钟的加热时间。随后可按“+30”增加加热时间。最大时间数值为“99:99”。
- (2) 在待机模式下按“+30”，可以 100% 火力加热食材 30 秒。每再按一次，可增加 30 秒，最大时间数值为“99:99”。

注意：

按时间微波、烧烤、空气炸锅组合和解冻加热时，每多按一次“+30”，加热时间可增加 30 秒。（按重量解冻时除外。）

## 加热茶、咖啡

- (1) 按一次“”，随即显示“1”。
- (2) 反复按“”，随即按次序显示“1”、“2”、“3”。
- (3) 按“ 开始”开始加热。

## 饮料菜单图表

菜单	重量	显示	火力
加热茶、咖啡	1 杯	1	P100
	2 杯	2	
	3 杯	3	

## 童锁功能

可使用此功能禁用触屏按钮，以免儿童不慎打开微波炉。

如需启用童锁：

在待机模式下，长按“”三秒。随即发出嘟嘟声，并出现童锁图标。

如需退出童锁：

在童锁模式下，长按“”三秒。随即发出嘟嘟声。

## 静音模式

如需启用静音模式：

在待机模式下，长按“8”三秒。随即显示“OFF”。此时再按键，不会发出声音。

如需退出静音模式：

静音模式下长按“8”三秒。蜂鸣器随即发出提示音，并显示“On”。

## 节能功能

如需进入节能模式：

在待机模式下按一次“”。屏幕随即熄灭。

如需取消节能模式：

在节能模式下按任意键或开闭舱门，既可取消。

## 查询功能

- (1) 如果设置了童锁，在加热状态下按“”，将显示当前时间三秒。
- (2) 在微波加热状态下按“”，可查询火力。在烧烤、对流和组合加热状态下，可分别按对应的键查询加热温度或加热模式。

## 问题排除

正常	
微波炉干扰电视接收	微波炉运行时可能会干扰收音机和电视接收。它类似于小型电器所产生的干扰，如搅拌器、吸尘器、电风扇。 这属于正常现象。
昏暗的微波炉灯	在低火力微波加热状态下，微波炉灯可能会变暗。这属于正常现象。
积聚在舱门上的蒸汽以及热空气会从通风口排出。	加热时，食物可能会产生蒸汽。多数蒸汽均可从通风口排除，但部分蒸汽也可能会在舱门等低温区域积聚。这属于正常现象。
微波炉在未放入食物的情况下不慎启动。	严禁在未放入任何食物的情况下运行设备。 此举十分危险。

故障	潜在原因	解决办法
微波炉无法启动。	(1) 电源线未插紧。	拔出插头。然后，10 秒后再次拔出插头。
	(2) 保险丝熔断或断路器跳闸。	更换保险丝或复位电路断路器（由我公司专业人员进行维修）。
	(3) 电源插座出现故障。	用其他电气设备测试电源插座。
微波炉无法加热	(4) 舱门未关紧。	重新关好舱门。


## 规格

型号:	<b>GÅTEBO 506.035.12</b>
额定电压:	220V 50Hz
额定输入功率 (微波) :	1450W
额定输出功率 (微波) :	900W
烧烤:	1000 W
对流:	2000 W
微波炉容量:	26.67L
转盘直径:	288mm
外部尺寸:	495.0 x 436.0 x 292.0mm
净重:	15.51kg
噪音:	≤63dB (A)

序列号 (以 SN 开头的 22 位代码)

序列号: xxxxxxxxxxxxxxxxxxxxxxx

产品编号 (8 位代码)

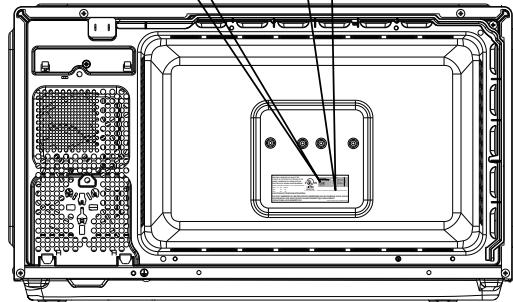

图片仅供参考

## 安装和连接


### 台面安装

取出所有包装材料和配件。检查微波炉是否出现任何损坏，比如，凹痕或舱门破裂。请勿安装已受损的微波炉。

**橱柜：**移除微波炉橱柜表面的所有保护膜。请勿卸下连接在微波炉腔体上的浅棕色云母盖，以便保护磁控管。

### 安装

- 选择可为进气口和/或排气口提供充足开放空间的水平表面。

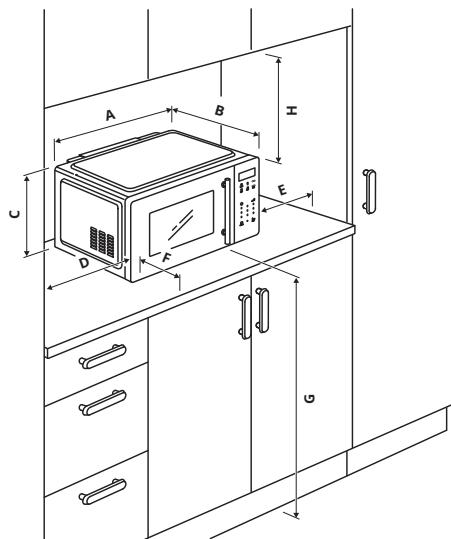

- 最低安装高度 85 厘米。
- 设备后表面应靠墙放置。

在微波炉上方至少留出 30 厘米空隙，而微波炉与任何相邻墙壁之间需要留出至少 20 厘米的间隙。

- 请勿卸下微波炉底部的支脚。
- 阻塞进气口和/或排气口可能会损坏微波炉。

- 尽可能远离无电线设备和电视放置微波炉。微波炉运行时可能会干扰无线电设备或电视的信号接收。

- 将微波炉插头插入标准家用插座。确保输入电压和频率与额定标签上所标注的电压和频率相同。

### 铭牌 参数图表

#### 台面独立式微波炉

商品名称：

商品编号：

A	49.5	cm	19.5 "
B	43.6	cm	17.2 "
C	29.2	cm	11.5 "
D	20	cm	8 "
E	20	cm	8 "
F	最低 20	cm	8 "
G	最低 85	cm	33.5 "
H	30	cm	11.8 "

### 另注：


为增加安全性，微波炉距离台面边缘最低 20 厘米 (8 英寸) 间距。

**警告：**请勿将微波炉安装在灶台或其他发热电器上。如果将其安装在热源附近或上方，则可能会损坏微波炉并导致保修失效。



微波炉运行时，其可触及表面可能很烫。

## 环保要求

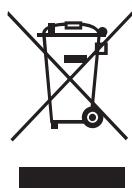

根据电子电气设备废弃物 (WEEE) 指令，电子电气设备废弃物应单独进行收集和处理。未来若需处理本产品，请勿将其与生活垃圾一同处理。请将本产品送往电子电气设备废弃物收集点 (如果有)。

## 宜家质保

### 宜家的质保期有多长？

自您从宜家购买电器之日起，其保修有效期为五(5)年。需提供原始销售收据作为购买凭证。如果质保期内进行过售后服务，售后服务不会延长产品的质保期限。

### 由谁提供售后服务？

请联系最近的宜家商店。

### 产品质保涵盖哪些内容？

质保涵盖从宜家购买日期算起，由制造问题或不良材料导致的设备故障。本质保仅对家用生效。“产品质保不涵盖哪些内容？”标题中规定了例外条件。质保期内的维修成本，例如修理、配件、人工和差旅费无需用户承担，前提是维修设备时不产生特别支出。更换下来的部件将归宜家所有。

### 宜家将如何纠正问题？

宜家会对产品进行检查，并单独裁定产品是否享受质保。如果产品享受质保，宜家会单独裁定是否维修缺陷产品，还是替换为相同或同等产品。

### 产品质保不涵盖哪些内容？

- 正常磨损。
- 故意或疏忽造成的损坏；不遵守操作说明、不正确安装或连接错误电压造成的损坏；化学或电化学反应、生锈、腐蚀造成的损坏；或者水造成的损坏，包括但不限于水中过量石灰造成的损坏；以及异常环境条件造成的损坏。
- 易损件，包括电池和灯。
- 不影响设备正常使用的非功能和装饰性部件，包括各种划痕和色差。
- 外物以及清洗或疏通过滤器、排水系统或肥皂盒导致的意外损坏。
- 以下部件受损：陶瓷玻璃、附件、餐具篮、进水和排水管、密封件、灯和灯盖、屏幕、旋钮、外壳和外壳部件。除非能证明受损是由生产故障所导致。
- 维修工作不是由我们的指定服务提供商和/或授权服务合作伙伴执行，或者未使用原厂配件。
- 因错误安装或未按照规范安装而导致的维修。
- 设备未在家用环境中使用，即用于专业用途。
- 运输过程中损坏。如果客户将产品运送到自己家或另一地址，宜家对运输中产生的任何损坏不负责任。如果宜家负责将产品运到客户指定送货地址，那么运输途中发生的产品损坏由宜家承担。
- 宜家设备的初装费用。如果宜家指定服务提供商或其授权服务合作伙伴依照保修条款维修或更换设备，如有必要，指定服务提供商或其授权服务合作伙伴应重新安装修复后的设备或安装替换设备。

### 如何遵守当地法律

宜家质保政策为您提供的合法权益符合或超过所有当地法律要求。这些条件不会以任何方式限制当地法律所规定的消费者权利。

### 有效区域

把在某个欧盟国家购买的设备带到另一欧盟国家后，应按新到国家的正常保障条件框架提供维修服务。只有设备符合以下条件并按照以下条件进行安装，宜家才有义务依照保障框架提供维修服务：

- 提出保障申请时所在国家的技术规格；
- 《安装说明》和《用户手册安全信息》。

### 宜家产品售后

请及时联系宜家，以便：

- 提出保障服务申请；
- 要求宜家为其产品功能提供说明。

为确保我们为您提供最佳协助，联系我们之前请仔细阅读《安装说明》和/或《用户手册》。

### 如果您需要售后服务，应如何联系我们



您在拨打维修服务电话时，宜家售后客服中心会在电话中协助您解决设备的基本问题。请通过宜家目录或访问网址[www.ikea.com](http://www.ikea.com)，查询当地宜家商店电话号码和营业时间。

**为向您提供更快速的维修服务，请同时提供设备铭牌上注明的宜家产品编号（8位编码）。**

### 保留销售收据！

收据是您的购买凭证，在申请保修时需要提供收据。销售收据还注明宜家店名以及您所购买的每件设备的编号（8位编码）。

### 您是否需要额外的帮助？

如需咨询与产品售后无关的任何其他问题，请联系最近的宜家商店客服中心。我们建议您在联系我们之前仔细阅读设备文档。

# 中国RoHS

## 产品中有害物质的名称及含有信息表

部件名称	有害物质									
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBBs)	多溴二苯醚(PBDEs)	邻苯二甲酸二正丁酯(DBP)	邻苯二甲酸二异丁酯(DiBP)	邻苯二甲酸丁苄酯(BBP)	邻苯二甲酸二(2-乙基)己酯(DEHP)
变频器	×	○	×	○	○	○	○	○	○	○
触摸屏	×	○	○	○	○	○	○	○	○	○
电机组件	×	○	○	○	○	○	○	○	○	○
电脑板	×	○	×	○	○	○	○	○	○	○
电源线	×	○	○	○	○	○	○	○	○	○
定时器	×	○	×	○	○	○	○	○	○	○
风机组件	×	○	○	○	○	○	○	○	○	○
高压变压器	○	○	×	○	○	○	○	○	○	○
高压二极管组件	×	○	○	○	○	○	○	○	○	○
控制面板组件	×	○	○	○	○	○	○	○	○	○
滤波板组件	×	○	×	○	○	○	○	○	○	○
水泵组件	×	○	○	○	○	○	○	○	○	○
温度、湿度传感器	×	○	○	○	○	○	○	○	○	○
温控器	×	○	×	○	○	○	○	○	○	○
扬声器、蜂鸣器	×	○	○	○	○	○	○	○	○	○
蒸汽发生器	×	○	○	○	○	○	○	○	○	○
灶台板组件	×	○	○	○	○	○	○	○	○	○
烤箱阀体、电磁阀、喷嘴	×	○	○	○	○	○	○	○	○	○
烤箱一体化灯	×	○	○	○	○	○	○	○	○	○
烤箱门锁	×	○	○	○	○	○	○	○	○	○
烤箱温度探针	×	○	○	○	○	○	○	○	○	○
烤箱接线盒	×	○	○	○	○	○	○	○	○	○
烤箱转换开关	×	○	×	○	○	○	○	○	○	○
烤箱能量调节器	×	○	○	○	○	○	○	○	○	○

### 备注:

- :表示该有害物质在该部件所有均质材料中的含量均不超出电器电子产品有害物质限制使用国家标准要求。
- ×:表示该有害物质至少在该部件的某一均质材料中的含量超出电器电子产品有害物质限制使用国家标准要求。
- 以上未列出的部件, 表明其有害物质含量均不超出电器电子产品有害物质限制使用国家标准要求。
- 以上清单中所包含零部件依据不同产品型号略有不同。
- 本产品在正常使用情况下,环保使用期限为15年, 建议使用一定年限后更换新机。

## 微波炉食品接触材料信息

请根据说明书要求正常使用本产品。

本产品食品接触用材料及部件符合GB 4806.1-2016 GB 9685-2016以及相应材料食品安全国家标准要求,具体信息如下:

材质	用途	执行标准	备注
ABS	水盒组件(水盒)	GB 4806.7-2023	仅接触水, 使用温度20°C-60°C
POM	水盒组件(水管塞)	GB 4806.7-2023	仅接触水, 使用温度20°C-60°C
PP	波导盖、水盒组件(导水管)	GB 4806.7-2023	导水管仅接触水, 使用温度20°C-60°C
PET	门贴	GB 4806.7-2023	----
铝合金YZAlSi11Cu3	蒸气发生器组件	GB 4806.9-2023	仅接触水, 使用温度20°C-160°C
云母	波导盖	GB 4806.4-2016	使用温度110°C
不锈钢10Cr17	门体、内胆、发热管罩	GB 4806.9-2023	----
电镀锌钢板基材/环氧聚酯涂层	门体、内胆基材,涂层	GB 4806.9-2023 GB 4806.10-2016	----
冷轧钢板基材/环氧聚酯涂层	门体、内胆基材,涂层	GB 4806.9-2023 GB 4806.10-2016	----
热镀锌钢板基材/环氧聚酯涂层	门体、内胆基材,涂层	GB 4806.9-2023 GB 4806.10-2016	----
热镀锌钢板基材/高温有机硅涂层	门体、内胆基材,涂层	GB 4806.9-2023 GB 4806.10-2016	----
不锈钢10Cr17基材/高温有机硅涂层	门体、内胆基材,涂层	GB 4806.9-2023 GB 4806.10-2016	----
不锈钢06Cr19Ni10基材/高温有机硅涂层	门体、内胆基材,涂层	GB 4806.9-2023 GB 4806.10-2016	----
搪瓷钢板基材/搪瓷涂层	内胆、烤盘基材,涂层	GB 4806.9-2023 GB 4806.3-2016	烤盘为可选配件, 使用温度100°C-300°C
钢丝基材/镀铬/镍/铜镀层	烤架基材,涂层	GB 4806.9-2023	可选配件, 不得接触酸性食品, 使用温度100°C-300°C
玻璃	玻璃盘、烤盘、烧烤管	GB 4806.5-2016	使用温度100°C-300°C
硼硅玻璃或微晶陶瓷	内隔板	GB 4806.5-2016 GB 4806.4-2016	使用温度40°C-300°C
陶瓷	蒸气发生器组件(盖)	GB 4806.4-2016	仅接触水, 使用温度100°C-300°C
硅胶	蒸气发生器组件(水管)、进水管、出水管、密封圈、门体滴胶	GB 4806.11-2016	使用温度20°C-230°C
不锈钢06Cr19Ni10	水盒组件(弹簧)、金属发热管、温度传感器探头、水泵、烤架	GB 4806.9-2023	烤架使用温度100°C-300°C

## 微波炉食品接触材料信息

请根据说明书要求正常使用本产品。

本产品食品接触用材料及部件符合GB 4806.1-2016 GB 9685-2016以及相应材料食品安全国家标准要求, 具体信息如下:

材质	用途	执行标准	备注
PBT	水箱镶件	GB 4806.7-2023	仅接触水, 使用温度20°C-100°C
PPS	蒸汽发生器盖、蒸盘支架	GB 4806.7-2023	仅接触水, 使用温度20°C-120°C
LCP E130i	塑料三通管	GB 4806.7-2023	使用温度20°C-230°C
50%ABS+50%PC	水箱座	GB 4806.7-2023	仅接触水, 使用温度20°C-100°C
PP+RS9120	浮球	GB 4806.7-2023	导水管仅接触水, 使用温度20°C-60°C
PTFE	蒸架	GB 4806.7-2023	使用温度230°C

备注:

- 1 所列部品为可能接触食物部品, 不宜作为容器长期存储食品;
- 2 本系列产品包含以上食品接触材料及部件, 但部分机型可能不含个别材料及部件, 以实际产品为准。

