



SYMFONISK

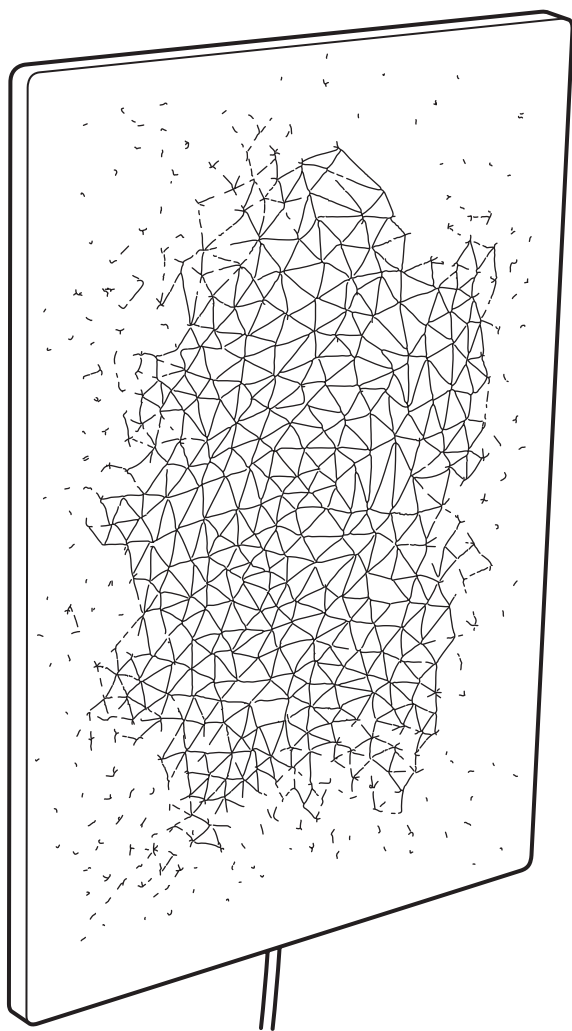

Design and Quality
IKEA of Sweden

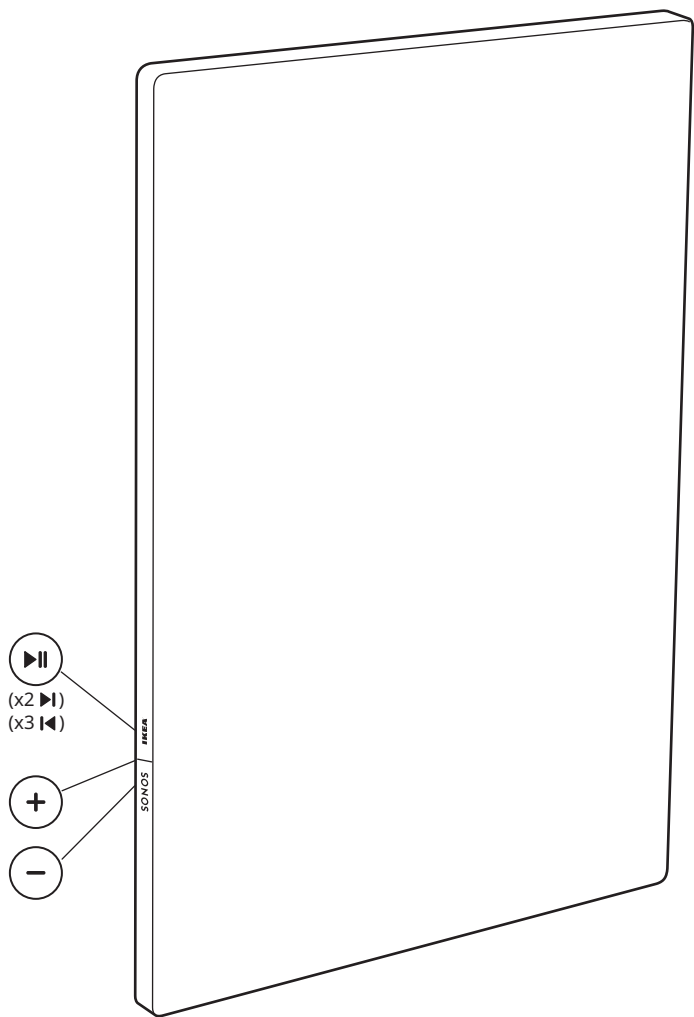

中文	4
English	5
繁中	6

快速指南

接通SYMFONISK 希姆弗斯 音箱电源。在苹果应用商店 (iOS设备) 或Google Play应用商店 (安卓设备) 搜索Sonos。



安装并打开Sonos S2 应用。按照指示，设置SYMFONISK 希姆弗斯 音箱。

如果你已经拥有Sonos系统：请打开Sonos应用，并接通SYMFONISK 希姆弗斯 音箱电源。在应用中，选择“设置”（齿轮图标）>“系统”>添加设备，按照指示，设置SYMFONISK 希姆弗斯 音箱。

音箱功能

 **播放/暂停。**按一次，开始或停止播放音乐；按两次，跳转至下一首歌曲；按三次，切换回上一首歌曲；长按，可添加另一个房间内播放的音乐。

状态指示灯。指示音箱状态。
更多信息，请参见完整版说明手册

 **调高音量**

 **调低音量**

更多信息：
如需获取完整版说明手册和辅助资料，请登录<http://www.ikea.cn>。
——选择你所在的国家或地区。在搜索栏搜索产品。找到组装说明和手册。

保养说明
用软布蘸水擦拭音箱，再用一块干燥的软布擦干。

型号名称：	SYMFONISK 希姆弗斯
型号：	E1913
工作温度：	0°C至40°C
网络待机功耗：	2.06瓦(HiNA)
带宽：	≤ 20 MHz
工作频率和无线电输出功率：	
2400 – 2483.5MHz - ≤ 20 dBm EIRP 5725 – 5850MHz - ≤ 33 dBm EIRP	

只限室内使用

制造商： 瑞典宜家有限公司（IKEA of Sweden AB）

地址： Box 702, SE-343 81 Älmhult, SWEDEN

请妥善保管本说明书，以备日后参考。

重要信息与警告！

- 此款音箱仅限室内使用，适用温度范围为0°C至40°C。
- 请勿将音箱置于潮湿、微湿或多尘的环境中，否则可能导致音箱受损。
- 切勿使用研磨剂或化学溶剂，否则会损坏产品。
- 建筑材料、器件放置位置的差异会影响无线连接的范围。
- 请勿将本产品安装于封闭空间。为便于通风，请在产品周围留出间隙。
- 请勿将本产品暴露在过热环境中，如阳光、热源、火源或类似环境。
- 本设备上不得摆放无遮盖的明火火源，如蜡烛
- 请勿尝试自行修理本产品，因为打开或移除螺丝盖可能导致触电风险。

射频暴露信息

根据射频暴露合规要求，终端用户在正常操作设备时，应与设备保持至少20cm的间距。



带十字的垃圾桶标志代表该产品必须与家用垃圾分开处理。同时对产品的处理必须符合当地关于废物处理的相关规定。每做一次分类，就减少了送入焚烧炉和垃圾填埋场垃圾的数量，进而将不利于人类身体健康和环境的负面影响最小化。想了解更多，请联系当地宜家商场。

QUICK GUIDE

Plug in your SYMFONISK speaker. Go to the Apple App Store (iOS devices) or Google Play Store (Android devices) and search for Sonos.



Install and open the Sonos S2 app. Follow the instructions to set up your SYMFONISK speaker.

If you already have a Sonos system: Open the Sonos app and plug in your SYMFONISK speaker. In the app, select Settings (gear icon) > System > Add Product. Follow the instructions to set up your SYMFONISK speaker.

SPEAKER FUNCTIONS



Play/Pause. Press once to start or stop the music; twice to skip to the next track; three times to jump back one song. Press and hold to add the music playing in another room.

Status Light. Indicates current status of the speaker.
See full instruction manual for more information



Volume Up



Volume down

Additional information:

The full instruction manual and support material can be found at <http://www.ikea.com>.

— Choose the country you are in. Search your product in the search field. Go to Assembly Instructions and Manuals.

CARE INSTRUCTIONS

To clean the speaker, wipe with a soft moistened cloth Use another soft, dry cloth to wipe dry.

Model name:	SYMFONISK
Type number:	E1913
Operating temperatures:	0°C to 40°C
Network Standby Consumption:	2.06 W(HiNA)
Bandwidth:	≤ 20 MHz
Operating frequency and Radio output power:	
2400 – 2483.5MHz - ≤ 20 dBm EIRP 5725 – 5850MHz - ≤ 33 dBm EIRP	

For indoor use only

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN

Save these instructions for future use.

IMPORTANT & WARNING!

- The speaker is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C.
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- Never use abrasive cleaners or chemical solvents as this can damage the product.
- Different building materials and placement of the units can affect the wireless connectivity range.
- Never install the product in a confined space. Always leave a space around the product for ventilation.
- Product shall not be exposed to excessive heat such as sunshine, heat sources, and fire or similar.
- No open flame sources, such as candle lights should be placed on the apparatus
- Do not attempt to repair this product yourself, as opening or removing screwed covers may expose you to the risk of electric shock.

RF EXPOSURE INFORMATION

According to RF exposure regulations, under normal operations the end user shall refrain from being closer than 20 cm from the device.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

快速功能表

先把SYMFONISK 喇叭插上插頭。到Apple App Store (iOS裝置) 或Google Play Store (Android裝置)搜尋 Sonos。



下載並打開Sonos S2 應用程式。按照說明設定你的SYMFONISK 喇叭。

若你已安裝Sonos應用程式：打開Sonos應用程式，然後把SYMFONISK 喇叭插上插頭。在應用程式內選擇設定 (Settings) (齒輪圖示) > 系統(System) > 新增裝置 (Add Product) 按照說明設定你的SYMFONISK 喇叭。

喇叭功能

播放/暫停。按一下播放或停止音樂。按兩次跳到下一首。按三次回到前一首。按住按鈕，可在另一個房間撥放音樂。

狀態指示燈。指示喇叭狀態。
更多產品資訊，請參閱使用說明書。

調大音量
 調小音量

額外資訊

完整的使用說明書和支援服務可上網<http://www.ikea.com>查詢。
- 選擇你的國家。請使用搜尋功能查詢產品，下載組裝說明書和使用說明書。

保養說明

用柔軟的濕布擦拭乾淨，再用柔軟的乾布擦乾。

產品名稱：	SYMFONISK
型號：	E1913
操作溫度：	0°C – 40°C
網路待機耗電量：	2.06W(HiNA)
帶寬：	≤ 20 MHz
操作頻率及無線電輸出功率：	
2400 – 2483.5MHz - ≤ 20 dBm EIRP 5725 – 5850MHz - ≤ 33 dBm EIRP	

僅適合室內使用。

委製商：IKEA of Sweden AB

地址：Box 702, SE-343 81 Älmhult, SWEDEN

請妥善保留說明書，以供參考。

重要資訊和警語！

- 喇叭僅適合室內使用，使用溫度範圍0°C - 40 °C。
- 請勿將喇叭放在潮濕或灰塵過多的環境，以免造成損害。
- 請勿使用含有研磨成分的清潔劑或化學溶劑，以免損害產品。
- 不同的建築材質和放置地方，可能影響無線連接的範圍。
- 請勿將產品安裝在狹窄空間。產品周圍務必保留空間，使空氣流通。
- 請勿將產品放在陽光直射或接近熱源的地方，以免造成過熱的危險。
- 請勿將燭火等熱源放在產品上方。
- 請勿自行維修產品，以免因打開或拆下蓋子而暴露於觸電的危險。

無線電頻率暴露資訊

根據無線電頻率暴露規範，正常操作的情況下，終端使用者應與裝置保持至少20公分的距離。



垃圾桶畫叉圖案表示產品不可當作家庭廢棄物丟棄。產品須依當地廢棄物規定丟棄處理。與家庭廢棄物分開擺放，可幫助減少送往焚化爐或掩埋場的廢棄物數量，並降低可能危害人體健康和環境的機會。請向IKEA客服部取得更多相關資訊。

